

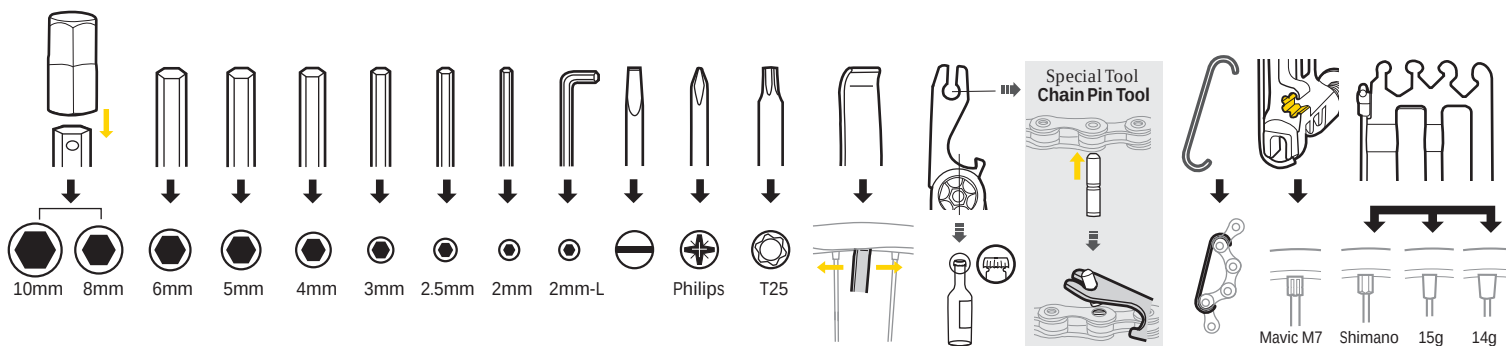
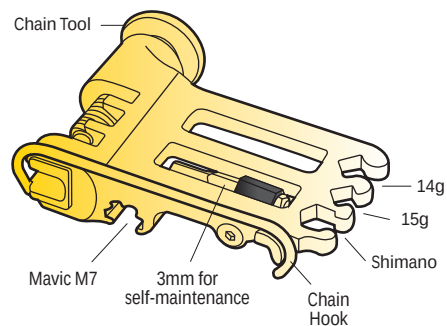


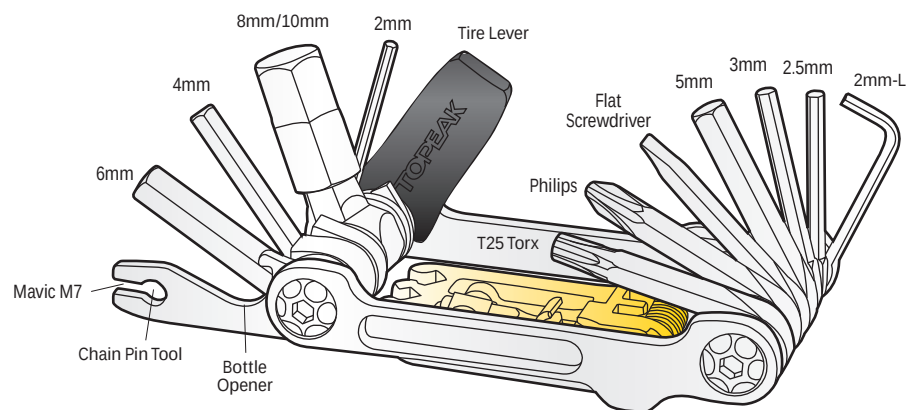


Using Chain Tool



Install new chain pin or remove old chain pin.

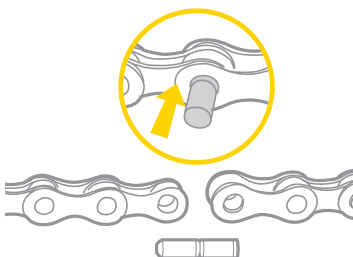

 Primary Chain Link Fence Secondary Chain Link Fence



Use Primary Chain Link Fence to install or remove chain pin. Use Secondary Chain Link Fence to loosen stiff links.

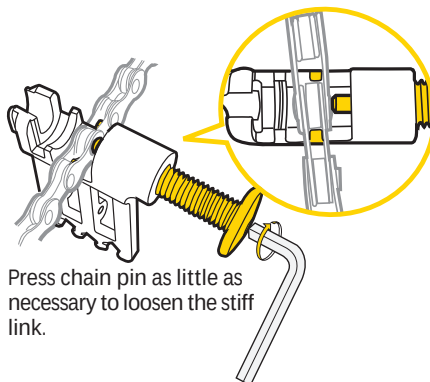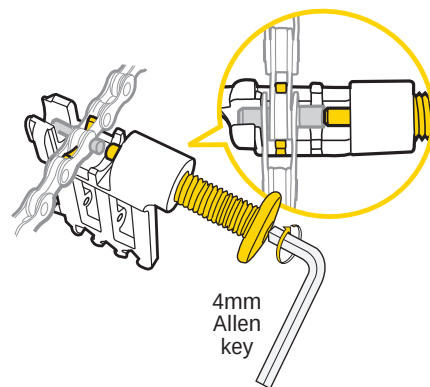


Press chain pin as little as necessary to loosen the stiff link.

WARNING




When pressing in the chain pin, push down on the top of the chain to keep it fully engaged in the chain tool cradle. Make sure the press pin of the chain tool is centered against the chain pin.

Using Chain Hook and Chain Tool

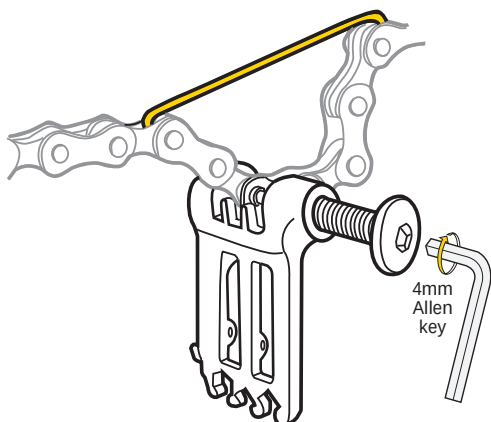


Tool maintenance

Using 3mm Allen key on chain tool to adjust the folding resistance.

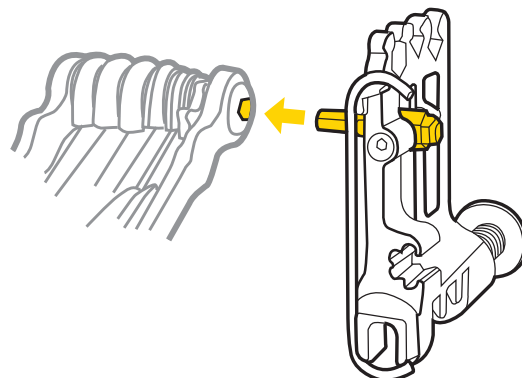


Spoke Wrenches for Marvic M7

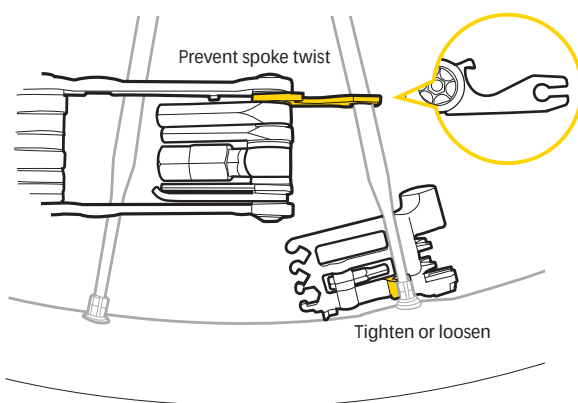


Using 8mm and 10mm Allen Keys

These two tools are combined.
Remove 10mm Allen head to use 8mm Allen key.

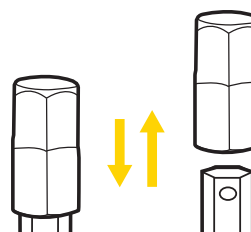


Using T25 Torx

Tighten disc brake rotor bolts with the T25 Torx wrench.

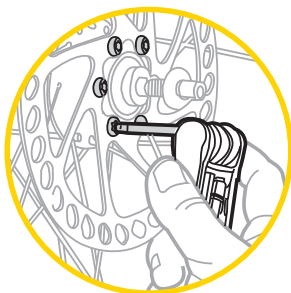

Using L Type 2mm Allen Key

Adjust brake lever reach bolts.

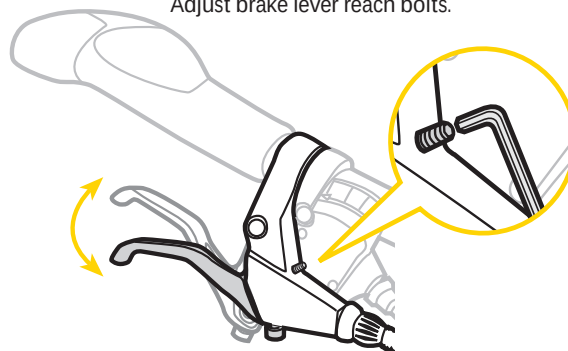

NOTE

Lubricate and maintain Mini 20 Pro with teflon based lubricant when needed. To prevent rusting, keep Mini 20 Pro dry.

WARRANTY

2-year Warranty: All mechanical components against manufacturer defects only.

Warranty Claim Requirements

To obtain warranty service, you must have your original sales receipt. Items returned without a sales receipt will assume that the warranty begins on the date of manufacture. All warranties will be void if The Mini 20 Pro is damaged due to user abuse, tool or body alterations, modification, or used in any way not intended as described in this user's guide.

* The specifications and design are subject to change without notice.

Topeak products are available only from professional bicycle shops.

Please contact your nearest Topeak authorized bicycle dealer for any questions.

For customers in the USA, call: 1-800-250-3068 Website: www.topeak.com