
MOUNTING INSTRUCTION SPEEDROCKER → 11567

ALLROAD ROAD MOUNTAIN

PARTS


TO ITEM 1.

SILICON VELCRO STRAPS FOR FITTING MUDGUARDS IN THE FRONT

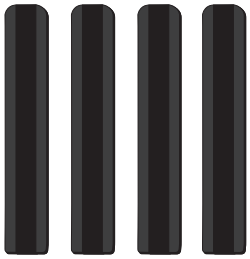



TO ITEM 2.

ELASTIC RUBBER STRAPS FOR FITTING MUDGUARD IN THE REAR

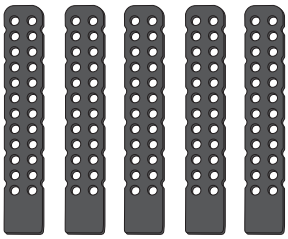


FRAME PROTECTION FOIL

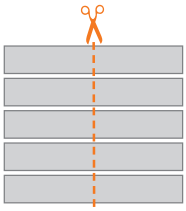


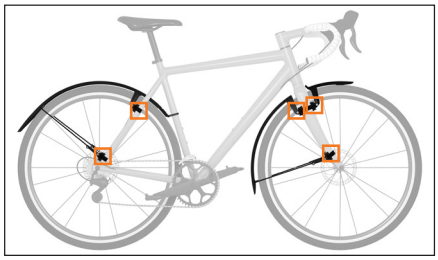


ATTENTION!
KEEP THE MINIMUM DISTANCE OF 15 MM BETWEEN FENDER AND TYRE.

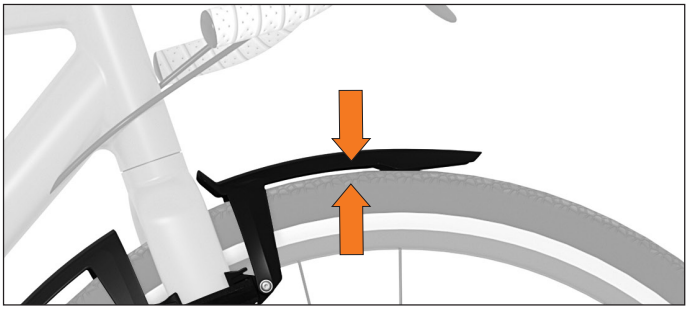


1. FENDER-ASSEMBLING FRONT

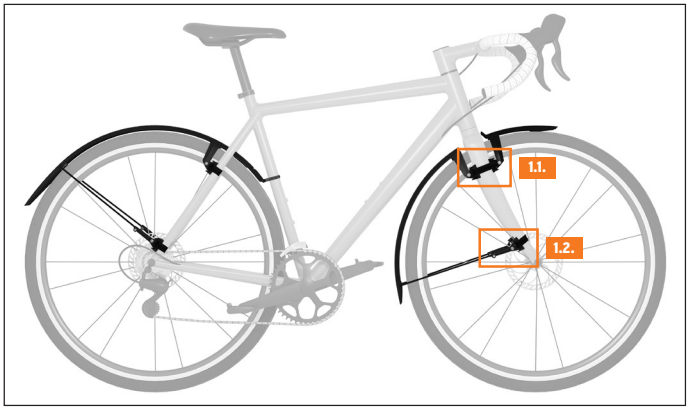


1.1.

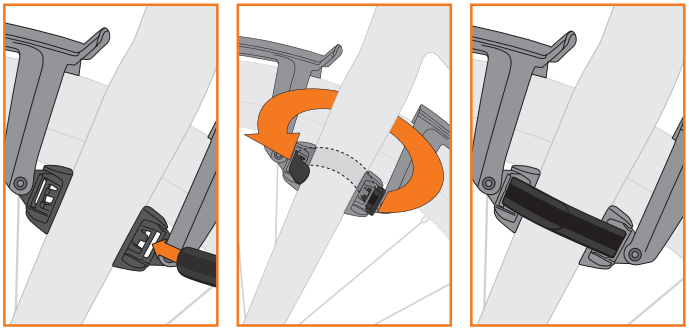

1.2.

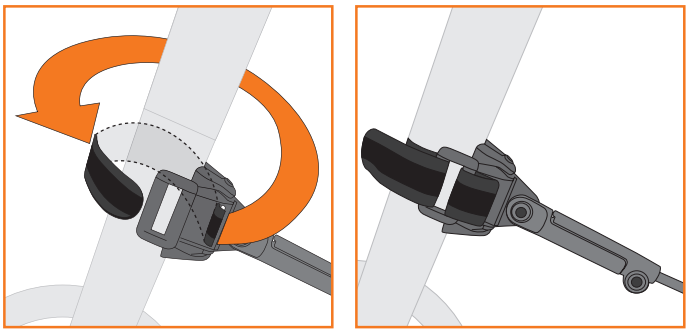

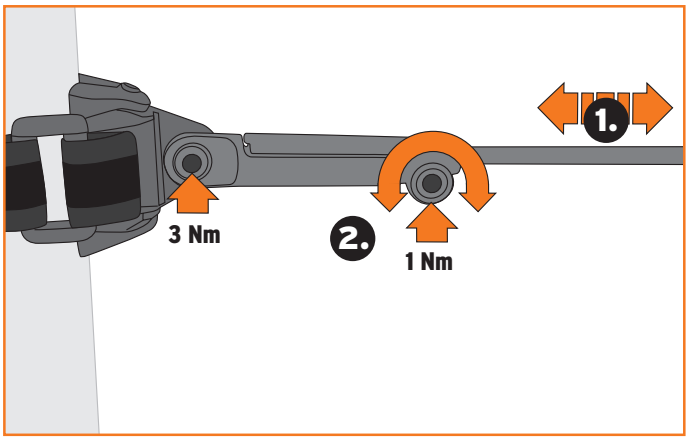


CAUTION: Not suitable for suspension forks


MOUNTING INSTRUCTION SPEEDROCKER → 11567


ALLROAD ROAD MOUNTAIN


FENDER-ASSEMBLING REAR

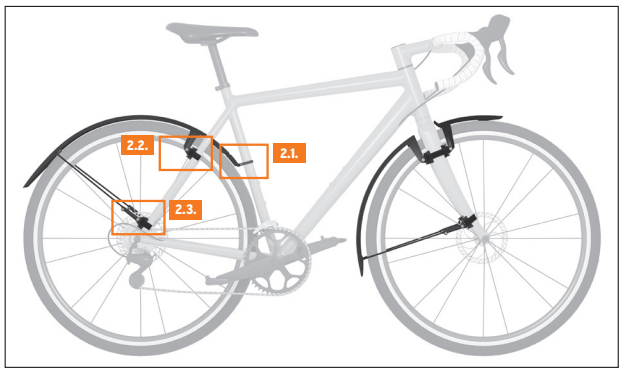


2.1.

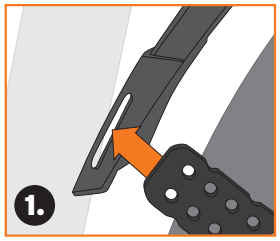


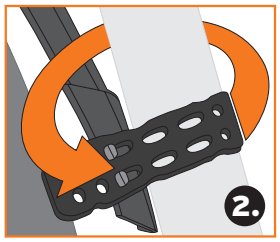

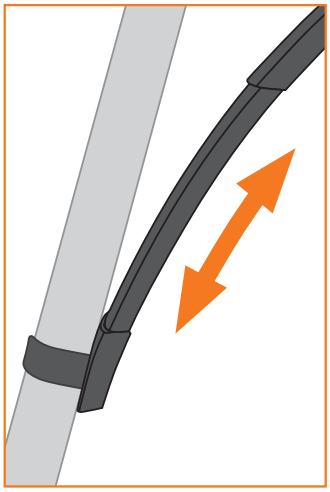


2.2.

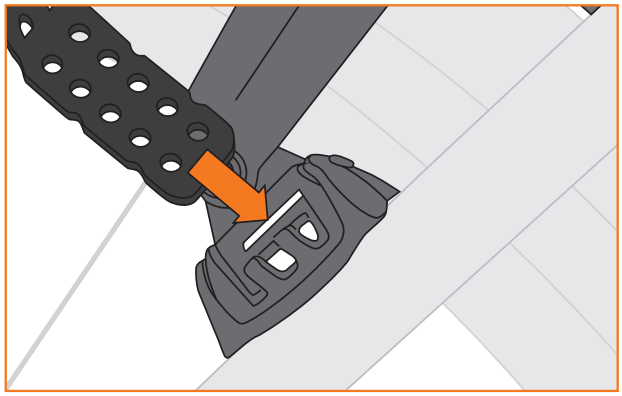

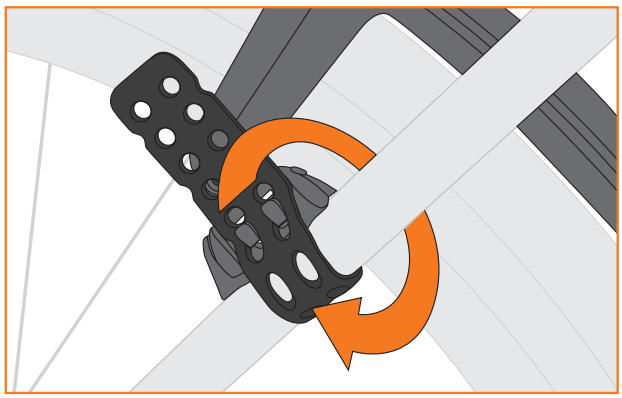



2.3.

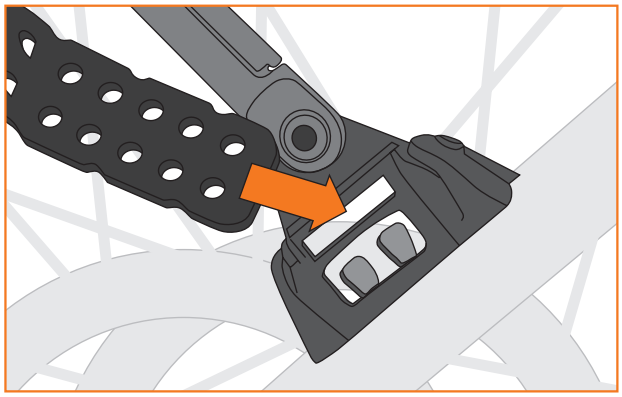




3. STAYS CUT

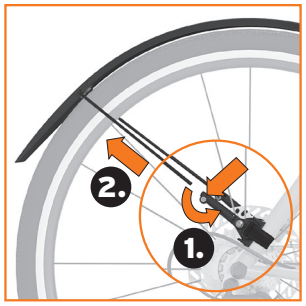

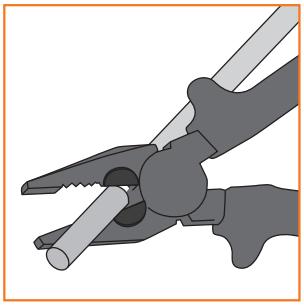

4. BIKE WITH CABLE BEHIND SEAT TUBE

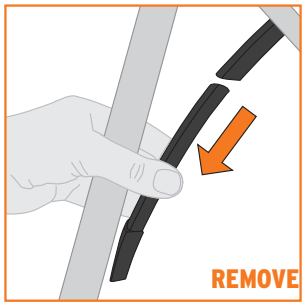



OPTIONAL

